




# 3D

WAVE - FOREST - PRISM - CUBISM - TETRIS - TECHNICS

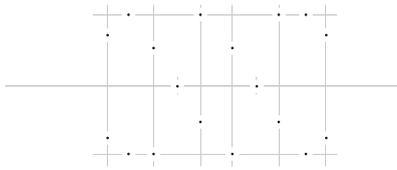


## STEP 1

Plot your Soudtect installation on the wall. Work out your bracket spacing based on the number of panels in your design.



## STEP 2

Find the centre of central BRACKET B and fix into place.

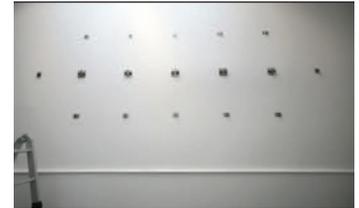


## STEP 3

Fit all the A and B brackets to the wall securely to cover the entire installation.



## STEP 4

Simply slide the first panel onto the brackets

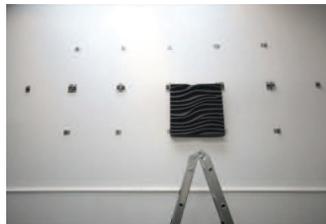

## STEP 5

Continue with all the other panels to complete the installation.



## STEP 6

Once all the panels are in place. You have the option of adding in the corner brackets to hold the outer four corners in place.



BRACKET A



BRACKET B



BRACKET C