




GlamFusion®

The Waterproof Wallcovering

MANUAL OF INSTRUCTION


GLAMORA

SEALING GLAMFUSION™ IN SHOWERS

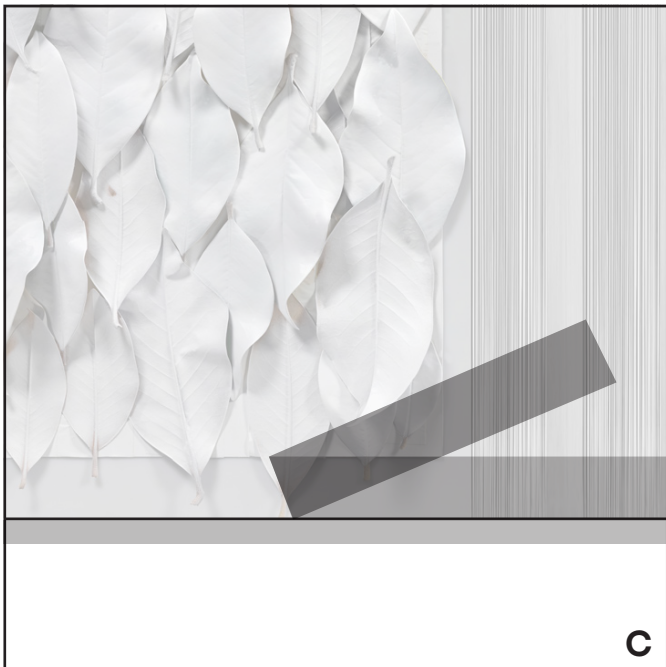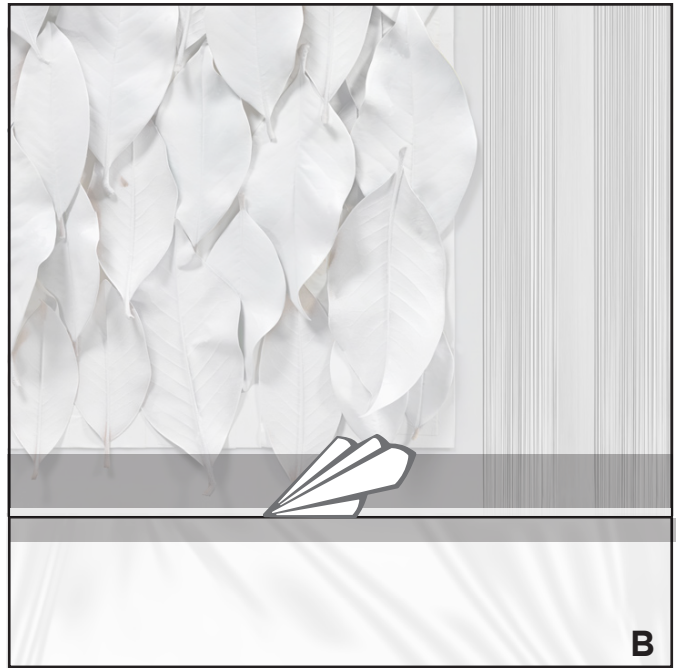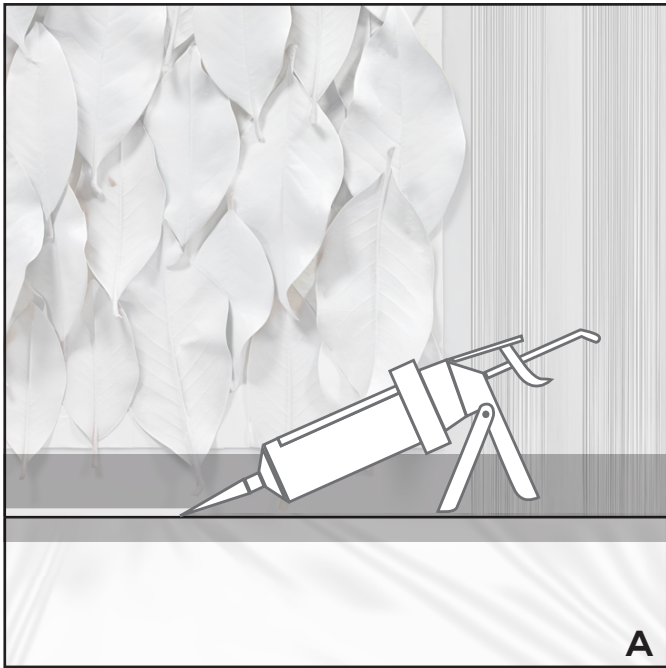


PREPARING THE WALL

GlamFusion™ must be applied to smooth, even and white surfaces. Apply an acrylic aqueous dispersion primer as per the manufacturer's instructions. Wait for the indicated drying time to elapse before installing GlamFusion™.



If working on a ceramic surface, it must be sanded using fine grained paper, and a second time using extra-fine grained paper. Apply the first coat of white, fine-textured skimming mortar (MAPEI PLANITOP 200 in white, for example) and let it dry. Apply a second coat of white, extra fine-textured skimming mortar (white MAPEI PLANITOP 560, for example), and let it dry. Apply an acrylic primer and then begin the GlamFusion™ installation.



If working with existing plaster or slightly uneven surfaces, they must be sanded using fine-grained sand paper. Apply a coat of white, extra fine-textured skimming mortar (white MAPEI PLANITOP 560, for example), and let it dry. Apply an acrylic primer and then begin the GlamFusion™ installation.

INSTALLATION

Installing GlamFusion™ in dry areas

- 1 The sheets are numbered consecutively. Start to apply the first sheet, taking care to check that it is perfectly perpendicular to the floor using a laser level or plumb line.
- 2 The Adhesive Pro glue is ready to use. Apply the glue using a wool, shorthaired roller, covering the wall area required by the first sheet and extending 10 cm outward (towards the second).
- 3 When positioning the first sheet, leave a border on the top to compensate for any uneven wall areas.
- 4 Using a silicone roller, press the sheet's edges onto the wall, ensuring that the seams between sheets adhere well. Remove any excess adhesive from GlamFusion™ immediately using a damp sponge (rinse the sponge frequently with lukewarm water).
- 5 Position the remaining sheets, ensuring that the design is perfectly lined up between each. Use a professional cutter to remove any excess covering.
- 6 Ready for immediate use in dry areas.

Installing GlamFusion™ in damp or temporarily wet areas

- 1 The sheets are numbered consecutively. Start to apply the first sheet, taking care to check that it is perfectly perpendicular to the floor using a laser level or plumb line.
- 2 The GlamFusion™ Adhesive Aqua is ready to use. Apply the glue using a 1 mm toothed spatula, covering the wall area required by the first sheet and extending 10 cm outward (toward the second).
- 3 When positioning the first sheet, leave a border on the top to compensate for any uneven wall areas.
- 4 Using a silicone roller, press the sheet's edges onto the wall, ensuring that the area around the seams, and the seams between two sheets, adhere well. Remove any excess adhesive from GlamFusion™ immediately using a damp sponge and/or bleach or ammonium-based soap.
- 5 Position the remaining sheets, ensuring that the pattern is perfectly lined up between each. Use a professional cutter to remove any excess material.
- 6 As soon as all the sheets are in place, you must seal the bottom border. Place masking tape along the wall, 2 mm from the floor or shower base, and along the floor, 2 mm from the wall. Apply a strip of GlamFusion™ Sealant to the uncovered space (fig. A), making sure it adheres well (fig. B), and immediately remove the tape (fig. C). Follow the same procedure to seal areas where the GlamFusion™ must be cut, i.e. for mixers, taps, shower heads, etc., (fig. D).
- 7 Ready for use after 48 hours.

GLAMORA

Glamora Srl
Via Berna, 12/14
41049 Sassuolo (MO) - Italy
T. +39 0536 076403
contact@glamora.it
glamora.it

Glamora Showroom
Via Solferino, 27
20121 Milano - Italy

MADE IN ITALY